

PAXIYA®



Product Model

PA-MG100

Product Category Handheld Inkjet Printer










Packing



Component



Parameter	Specification
Model NO.	PA-MG100
Operating system	Linux
Dimension	100*49*71mm
Weight	about 172 grams (excluding cartridges)
Machine material	ABS case
Product nozzle	TIJ thermal foam nozzle
Screen size	2.4-inch capacitive screen/320*240dpi
Printing accuracy	150/300/600DPI
Counting number	1-15 digits
Ink properties	dry based, water-based, oil-based
Cartridge capacity	42ml
Usage environment	temperature 0-40C, humidity 10-80%
Printing distance	2-5mm
Printing height	2-12.7mm
Voltage	8.0V-12V
Pulse width	1.5us-2.5us
Power parameters	2000mAh
Battery running Life	10hours
language	English,Russian,Arabic,French,German,Polish,Vietnamese,Japanese,
Handwriting input	English and Chinese
Product sprinkler	Tij Hot foam sprinkler
Inkjet Font Library	Synchronous Machine Font Library, can external U disk import font library
Quick drying colors	red, yellow, blue, green, orange, black, white, invisible
Printing Content	text, picture, variable barcode,date,QR code,logo
BAR code types	Code128, CODE39, INT25, UPCA, ENA13, QRCode, DataMatrix

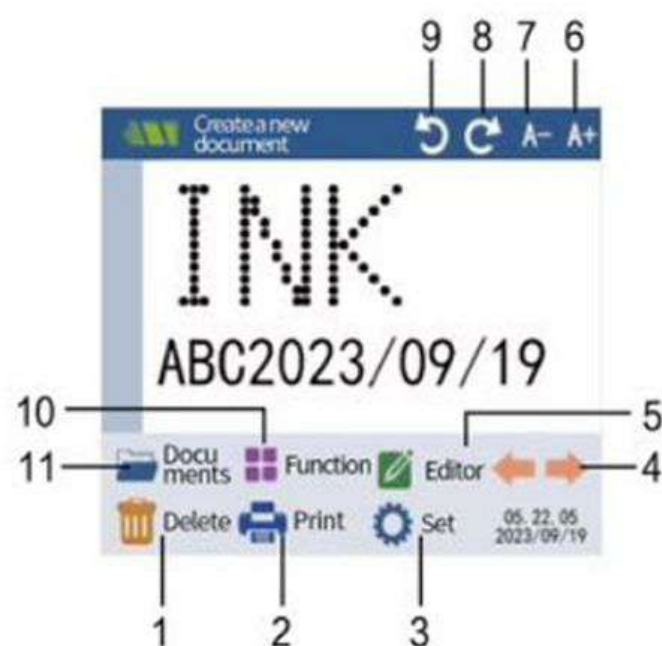

Content editing function

- 1.Delete: Deletes the selection
- 2.Print: Click this button to start the print interface
- 3.Set: Click this button to enter the system settingsmodify system parameters
- 4.Press the left and right buttons: Click the arrow to see the print before and after
- 5.Editor: Click this button to enter the edit screen, modify or enter print information
- 6.A+: When the font is selected, enlarge the font
- 7.A-: When the font is selected, reduce the font
- 8.⌂: Rotate to the right
- 9.⌂: Rotate to the left
- 10.Function: Click on this to select a variety of functional information input, such as QR code, logo, etc.
- 11.Documents: After the edited file is saved, you can find it here

Introduction to the main menu

1. Edit: Click on the button to go to the edit print information interface
2. Print: click the button to access the print interface
3. Settings: click the button to enter settings for system parameters



Small and light

1. The use of nylon lanyard design, hanging after use. According to the daily use of custom design.
2. Exquisite beyond your imagination.
- 3.168 grams, incredibly light.



PAXIYA®



PAXIYA®



PAXIYA®



PAXIYA®



PAXIYA®



PAXIYA®



PAXIYA®

